

## Valves and accessories

### 9162 Positioning valve

The positioning valve is equipped with male and female rapid connectors, for a fast assembly. The valve can be connected to the TRIS cylinder when the electric unit is used. The small movements of the tool facilitate the positioning of the bars.



**9163** for 2 cylinders

**9164** for 3 cylinders

**9165** for 4 cylinders

### Branch valves

Branch valves for 2-3 and 4 cylinders are used when several cylinders have to work with one pump or electrical control unit. These valves avoid to connect or disconnect continually the respective hoses. By just moving a simple lever, the branch valves divert the hydraulic oil to the cylinder to use. All branch valves are equipped with hoses and rapid connectors.



### 9817/9819 Rapid Connectors

All MULTIFOR equipment, cylinders and hoses are supplied complete with rapid connectors with locking and rapid coupler. 1/4" standard version, 3/8" on request with screw connector

**9817**  
Male



**9819**  
Female

### 9810 Pipes and extensions

The spare pipe of the MULTIFOR equipment is complete with female rapid connector and it has a standard length of 2,5 mt. The working range of cylinders can be extended by a simple addition of a 2,5 mt. extensions hose (9812) or 5 mt. (9813). These are realised with highpressure pipe, already filled with oil AGIP ARNICA 22 and with rapid connectors.



### 9828 Hydraulic oil

All MULTIFOR equipment, and hoses contain hydraulic oil. AGIP ARNICA 22. Whenever topping up is required, it is essential to use the same type of oil. For a best working of the pumps, the level must be inspected at regular intervals by checking the oil dipstick.

Available in cans of 1 Kg.

**It is highly recommended not to use oils other than those indicated by us, in particular do not use brake oil or dielectric oil for transformers.**

